HKS-09B user manual

Warning

Dear user:

Thanks for using our company's products, in order to fully make use of the products, we sincerely suggests follow:

◆◆Please read the instruction in detail and keep it well for further reading and consulting.

◆◆Please follow the instruction to fit and operate the machine correctly.

◆◆Please do not remove and change any accessories of the machine.

◆◆It forbids others to open and remove the mainframe except the authorized people in the company.

◆◆It forbids others to change and maintain the machine except the professional people.

◆◆Please contact us if there is any trouble during operation.

This product does not belong to medical, please don't use for disease treatment!

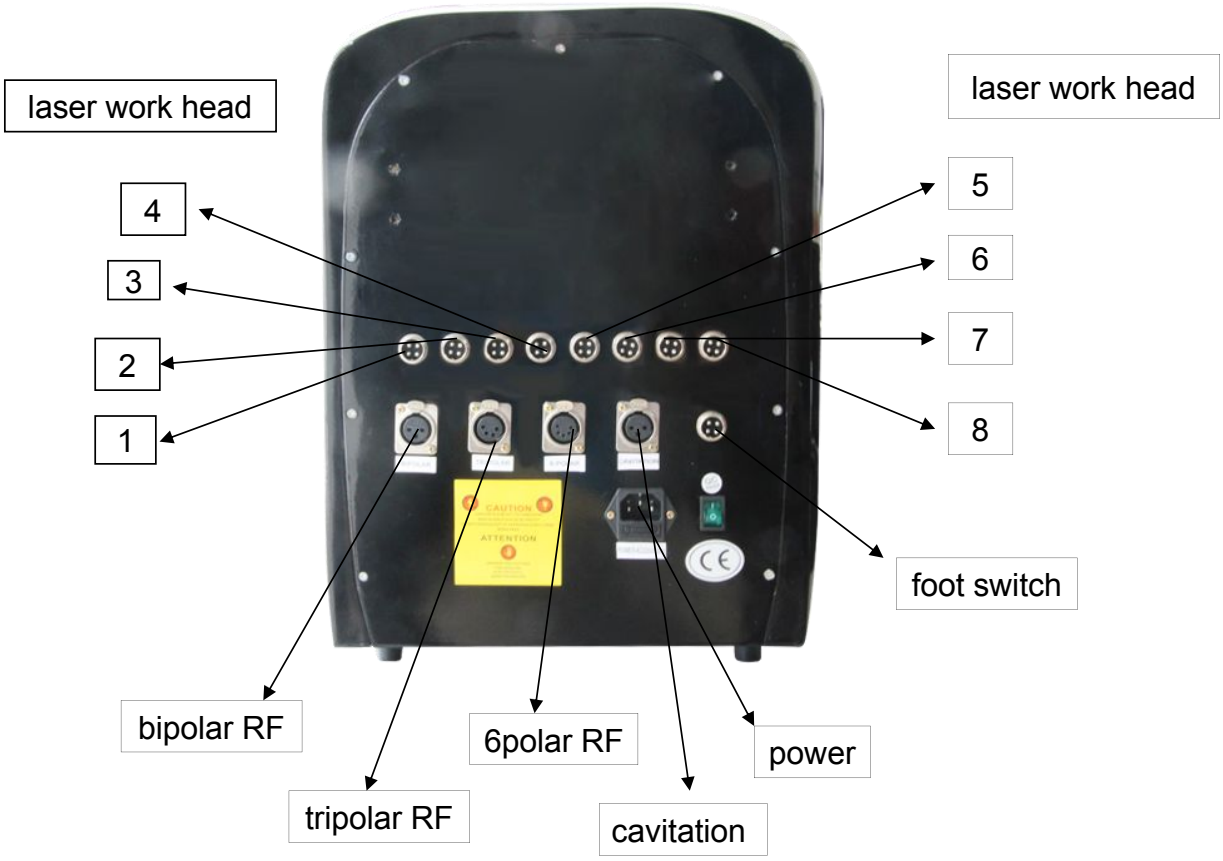

Tripolar RF for body and face

6polar RF with red laser for body

Bipolar RF for eyes

40kzh cavitation

laser work head

laser×8 *8

Service brake jack

Bind ties

Basal operation

1. Put the accessoris will and connect them to the host
2. Insert power supply line to machine, turn on the General power switch
3. As shows,Click "SET..." to enter function interface

1.Operation step of Laser X8

(1)Clean the skin, and according the treatment part to choose the suit band ties and tied them up.
(2)Put the Laser X8 work heads into the band ties, the side with Led contact to skin directly.
(3)Set intensity of every Laser X8 in interface . Operation steps:
on the location "channel 1 0", click" → "and "← "to set the intensity of laser, the range is :
1HZ~1000HZ. Then move the cursor "V" to the "channel 2 0", click " → "and " ← " to set the intensity of laser .....

(4)Setting work time
30 minutes of every treatment part, and click "Time" enter interface.
Click" →"and " ← " one time to change one minute, click the number of time directly to change ten minutes every time.then click "X8" return function interface.
(5)click " ‖ to start work
(6)The machine will pause automatically
if the setting time is over. Beautician take the Laser X8 work head out and
(6)put them well, then loosen the band ties.

40K Cavitation Explode Procedure

Apply the cavitation theory, uses the 40KHz ultrasound to make intense vibration, which causes a inner explosion in the fat tissues, thus get rid of lipocyte. It can effectively break down stubborn and deep fat, decrease lipocyte quantity and its size. The diathermal of the low frequency ultrasound can promote lipocyte and tissues liquid flow, which help drainage of fatty acid, waste and toxin through lymph system.

1.Clean the parts and applied gel on fleshy parts (e.g. abdomen, hip, thigh) .The amount depends on moving flexibility of the cavitation explode work head.

2.System default function is cavitation explode. Click the clock as) shows,<< time >> will be displayed and enter interface as, setting work time:

(1)Click << and >> besides of the << time >> to set work time, press one time to change one minute

(2)cavitation normally set about 15min.

(3)mode can set 1, 2, 3.

(4) intensity can set 5W to 50W.

5.Click the machine is in standby state. Beautician put the service brake under your feet, step on to start working,move away for pause. Click the machine stop working.(e.g. abdomen, hip, thigh) .

The amount depends on moving flexibility of the cavitation explode work head.

6.Beautician hold the cavitation explode work head to move slowly on skin, in circle or beeline repeatedly, and The Other hand push the fat towards the work head.

7.Do not use on back, avoid using on bones.

8.Do not use on uterus part when women do abdomen care. Abdomen treatment during menstruate should be avoided.

9.The machine will pause automatically if the setting time is over. Please click any place of the screen According to the hint.

10.Clean the lef tovers with hot towel, use warm towel to clean the cavitation explode work head.

Caution for using 40K

1.Applied enough gel on skin need treated.
2.Do not stay unmoved on any part of your body,do not stay on bones.
3.The total treatment time for daily should be within 30 minutes.
4.There will be ultrasonic only when you step on the service brake while using 40K cavitation explode work head.
5.Do not allowed to be placed under the state of no-load to avoid the damage caused by high heat.
6.40K work head can be used on fresh part of the body, Do not use for facial. If the skin is sensitive or
becomes unhealthy, the strength of the power should be adjusted down.

Bipolar RF for facial

1.Click " Bipolar RF " shows, enter interface as
2.Set work time, 20 minutes for facial and 15 minutes for eyes treatment.
3.Click << and >> besides of the << intensity >> to adjust Output intensity: 1(weak)~5(strength).
4.Click the machine is in standby state. Beautician put the service brake under your feet, step on to start working,move away for pause. Press
5.Apply gel on face around skin, move tostop working.the electrode probe in circle,
from inside to outside, operating on both side,right and left, one side is over then to start the other side,and must reduce the intensity according to the less fat on forehead and eyes.
NOTE :Do not let gel into eyes .
6.The machine will pause automatically if the setting time is over.
7.Clean the leftovers with hot towel, use warm towel to Clean the work head.

Tripolar RF for body

1.Click " Tripolar RF " as picture shows,
enter interface as
2.Set work time, 20 minutes for each part.
3.Click << and >> besides of the << intensity >> to adjust Output intensity: 1(weak)~10(strength).
4.Click the machine is in standby state.
Beautician put the service brake under
your feet, step on to start working, move away for pause. Press to stop working.
5.Applied gel on skin needed nursing, If there is too much fat, you can increase
the output intensity.
Tripolar RF work head suit for neck, arm, crus.
6.The machine will pause automatically
if the setting time is over.
7.Clean the leftovers with hot towel, use warm towel
to Clean the work head.

Caution for using RF

1.Beautician should wear insulated gloves during operation.

2.Do not wear any aglet, both for the beautician and the users.

3.The electrode probe must be fully in contact with skin.

4.Do not make the RF electrode stay on any part without moving.

Keep it moving on skin slowly.

5.Skin around eyes and forehead is very thin, the RF output

intensity should be relatively weakened.

6.Do not contact skin with unipolar when using of bipolar, tripolar,

hexpolar RF work head otherwise it will Produce pulse discharge,

gel paste etc. Products like gel maybe evaporated into a mist.

7.Do not let the laser light straightly shine upon the eyes in case

of eyes hurt.

Hexpolar RF for body

1.Click " Hexpolar RF " as picture shows, enter interface

2.Set work time,20 minutes for each part.

3.Click and besides of the << intensity >> to adjust Output intensity: 1(weak)~10(strength).

4.Click the machine is in standby state. Beautician put the service brake under your feet, step on to start working,move away for pause. Press to stop working.

5.The system default laser is start state, click function is closed. the laser

NOTE: Do not let the laser light straightly shine upon The eyes in case of eyes hurt.

6.Applied gel on skin needed nursing, the electrode probe move slowly on skin, If there is too much fat, you can increase the output intensity.

7.The machine will pause automatically if the setting time is over.

8.Clean the leftovers with hot towel, use warm towel to Clean the work head

Others
Click "set "as the shows.Enter interface as
1---Select language
2--Keys recovery back

Technical parameters

Input=AC110V/60Hz AC220V/50Hz
Power+≦110W
Output RF=5MHz
Output ultrasonic=40KHz
CAVITATION + LASER: Maximum Power: 87W, current: 0.6A
RF + LASER: Maximum Power: 61W, current: 0.5A;
Cavitation alone: Maximum Power: 56W, Current: 0.3A;
The separate RF: Maximum Power: 30W, current: 0,25 A;
Separate LASER: maximum power: 51W, current: 0.3A.

Accessories list

1.Host	1 set
2.Power supply line	1 pc
3.User manual	1 copy
4.Bipolar RF work head	1 pc
5.Tripolar RF work head	1 pc
6.Hexpolar RF laser work head	1 pc
7.40K cavitation explode work head	1 pc
8.Service brake	1pc
9.Accessory frame	3pcs
10.Hexagonal screws	12pcs
11.Hexagon wrench	1pc
12. laser×8	8pcs